

Pulldown faucet adapter




Pulldown adapter with 1/2" and 3/8" male connection.
3/8" compression metal adapter (no picture)



Base part


Pulldown adapter (vary)

Pure water line

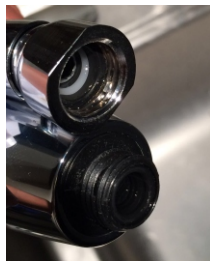


Check if pulldown adapter works with your faucet.
Unscrew shower head from pulldown faucet.
Try to screw pulldown adapter onto opening.
Proceed for next step if adapter fits hose.
If not, check another adapter until
find correct adapter. Make sure new adapter
screw onto Base part (see picture above).

Conversion.

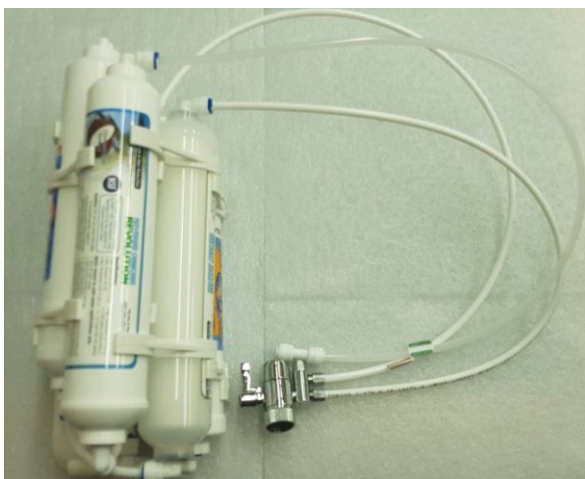

Place Countertop RO on work area


Use any tool (knife, utility knife, cutter) to cut divertor off

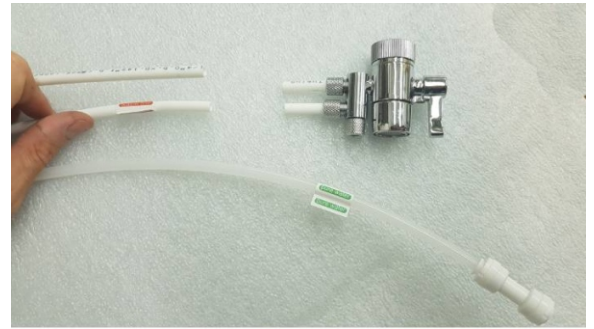

Remove blue c-ring at first stage (semiclear sediment filter)



Push against top of the fitting/collet (use finger or thumb). Use another hand to pull tubing out. Remove tubing.

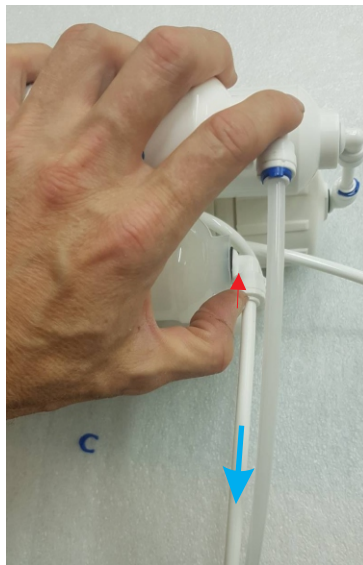

Insert tubing with pulldown adapter. Push tubing inside inside fitting for 1/4", then try to pull tubing out. If tubing insert correctly, tubing stays inside fitting. Insert blue c-ring after (not before).



Waste and pure water line have call tags (semiclear tubing is pure water, and white tubing is waste water line)